

Instruction sheet

Loading / unloading electric trucks

E-TRUCK – V2.2


1 Link to DW Service Portal

The following documents are available for download on the [Designwerk Service Portal](#):


	Instruction sheet LOW CAB	LOC002ALK000
	Instruction sheet MID/HIGH CAB	VOC002ALK000

2 Loading

- 1 Prepare the transport vehicle and secure it against rolling away.
- 2 Start the vehicle to be loaded (hereinafter referred to as electric truck) (Doc. VOC002ALK000).
 - a. Set the ignition key or start button to position 2.
 - b. Wait until the HMI has fully booted up.

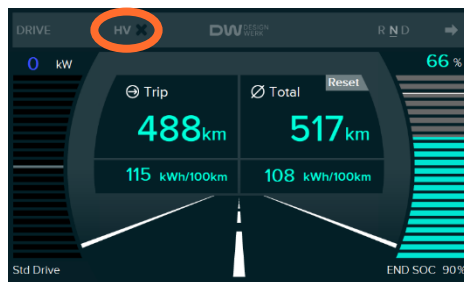

 - c. Turn the ignition key to position 3 for 2 seconds or press the start button again.
- d. A check mark appears on the HMI behind the text "HV".

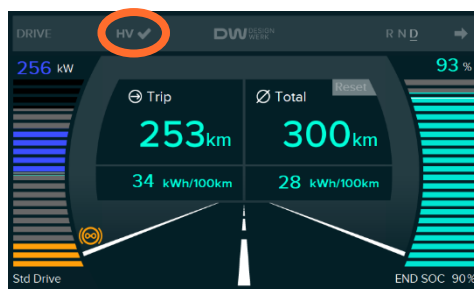


- e. Vehicle is running.
- 3 Fully raise the air suspension on the electric truck – according to the Volvo/Daimler operating manual.
- 4 Slowly drive onto the center of the loading area.
- 5 Have a second person monitor the loading process at all times to prevent collisions.
- 6 Lower the air suspension on the electric truck completely – according to the Volvo/Daimler operating manual.
- 7 Turn off the electric truck.
- 8 Turn off the main switch and stow it in the cab.


- 9 Lock the vehicle.
- 10 Fold in the mirrors.
- 11 Secure the load.
- 12 Check the electric truck for damage.
- 13 Sign the handover report.

3 Unloading

- 1 Prepare the transport vehicle and secure it against rolling away.
- 2 Fold out the mirrors.
- 3 Engage the main switch and turn it on.
- 4 Start the electric truck (Doc. VOC002ALK000).
 - a. Set the ignition key or start button to position 2.
 - b. Wait until the HMI has fully booted up.

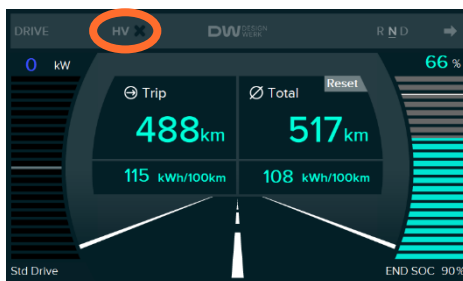

- c. Turn the ignition key to position 3 for 2 seconds or press the start button again.
- d. A check mark appears on the HMI behind the text "HV".

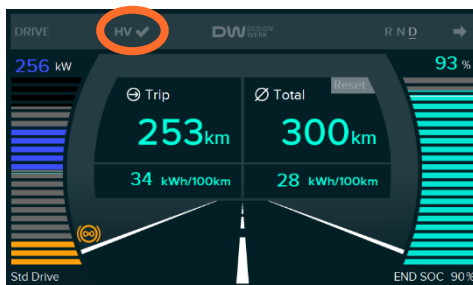

- e. Vehicle is running.

- 5 Fully raise the air suspension on the electric truck – according to the Volvo/Daimler operating manual.
- 6 Slowly drive off the loading area from the center.
- 7 Have a second person monitor the unloading process at all times to prevent collisions.
- 8 Lower the air suspension on the electric truck to driving level – according to the Volvo/Daimler operating manual.
- 9 Hand over the vehicle.
- 10 Sign the handover report and send it to Designwerk via email (tpl-e-lkw@designwerk.com).